
Model Type R3F Wall Mounting

R3F Models (back view)




For Radiators 20" to 60" Long - Use 2 K12 Brackets, one at each end

62" to 138" Long - Use 3 K12 Brackets, one at each end, one at the center

 $\ensuremath{\textbf{140}}\xspace$ to $\ensuremath{\textbf{236}}\xspace$ Long - Use $\ensuremath{\textbf{4}}\xspace$ K12 Brackets, one at each end, two distributed evenly in the middle

 $\ensuremath{\textbf{238}}\xspace$ to $\ensuremath{\textbf{296}}\xspace$ Long - Use $\ensuremath{\textbf{5}}\xspace$ K12 Brackets, one at each end, three distributed evenly in the middle

298" to 354" Long - Use **6 K12** Brackets, one at each end, four distributed evenly in the middle

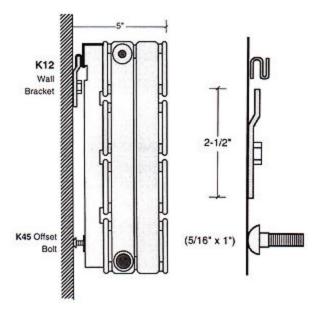

 ${\bf R}$ clip - Mount to the Cutouts on the RF Radiator at the K12 Positions

K12 Wall Bracket - Support Bracket used with RF Radiators

Normally shipped with the Radiators

K45 Offset Bolt - Carriage Bolt used at each weld nut at the bottom of the Radiator for leveling with the wall